

## ShieldPro Flood/Temperature Sensor Quick Start Guide



The ShieldPro Flood/Temperature sensor installs easily in areas where water damage is a risk-like under sinks or in basements.

The sensor notifies you when it detects water or extreme temperatures.

### What comes in the box?


- Flood/Temperature sensor x 1

### Flood/Temperature figures

**Figure 1:** Flood/Temperature sensor topside



**Figure 2:** Flood/Temperature sensor underside

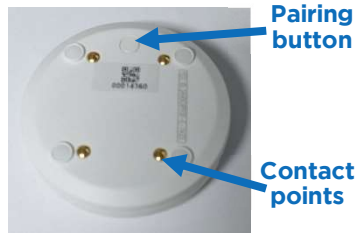

**Figure 3:** Sensor under a sink



### Placement tips

- Place on a flat surface with the underside facing the floor. No mounting brackets or screws required.
- **Water detection:** Place in areas prone to leakage and where water is most likely to pool.
- **Extreme temperature detection:** Place in areas where temperatures may reach below 41°F or above 95°F.
- You can enable or disable any of the sensor's modes from the panel.

### Install your Flood/Temperature sensor

**Step 1** Pair sensor with the panel.

**Settings** (☰ button) > **Devices** > + > Select **Water** > Follow the panel's instructions to pair your sensor.

**Step 2** Follow the panel's setup prompts to name and assign your sensor to a location.

**Step 3** Place your paired sensor as desired.

Questions?

Contact us at 1-800-574-7798 or [CST@shieldpro.com](mailto:CST@shieldpro.com)