

ShieldPro Flood/Temperature Sensor Quick Start Guide



The ShieldPro Flood/Temperature sensor installs easily in areas where water damage is a risk-like under sinks or in basements.

The sensor notifies you when it detects water or extreme temperatures.

What comes in the box?

- Flood/Temperature sensor x 1

Flood/Temperature figures

Figure 1: Flood/Temperature sensor topside



Figure 2: Flood/Temperature sensor underside

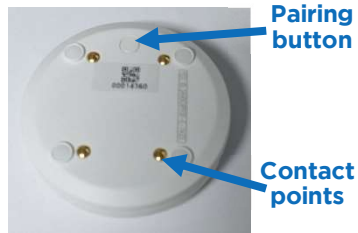


Figure 3: Sensor under a sink



Placement tips

- Place on a flat surface with the underside facing the floor. No mounting brackets or screws required.
- **Water detection:** Place in areas prone to leakage and where water is most likely to pool.
- **Extreme temperature detection:** Place in areas where temperatures may reach below 41°F or above 95°F.
- You can enable or disable any of the sensor's modes from the panel.

Install your Flood/Temperature sensor

Step 1 Pair sensor with the panel.

Settings (☰ button) > **Devices** > + > Select **Water** > Follow the panel's instructions to pair your sensor.

Step 2 Follow the panel's setup prompts to name and assign your sensor to a location.

Step 3 Place your paired sensor as desired.

Questions?

Contact us at 1-800-574-7798 or CST@shieldpro.com