



Indoor/Outdoor Camera Quick Start Guide



ShieldPro's wireless through the mobile app or panel. The camera occasionally requires charging.

What comes in the box?

- Wireless camera x 1
- Magnetic base x 1
- Pan head screw x 1
- Adhesive sticker x 1
- Wall anchors x 3
- Wall screws x 2
- USB-C charging cable x 1

Camera diagrams

Figure 1: Parts of the camera

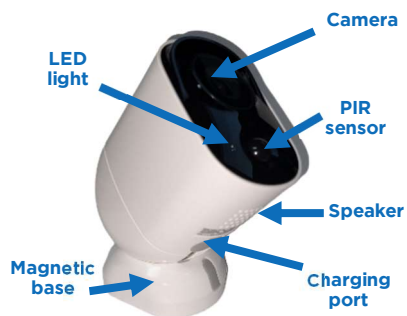 


Figure 2: Backside of the magnetic base and pan head screw


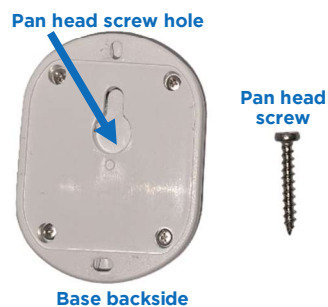 


Figure 3: Mounting screw points and weatherproofing plugs

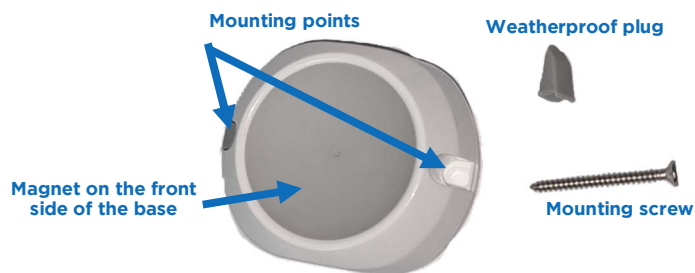 

Placement tips

- Suitable for indoor or outdoor use.
- To prevent false alarms, do not install near any heat sources.
- Make sure all gray weatherproofing seals are secure when using the camera outside.

Option 1: Mount with magnetic base

- Step 1** Charge your camera completely before mounting (see **LED Lights**).
- Step 2** Pair your camera to the panel and use the app to check that the live stream works before mounting.

Settings (☰ button) > **Devices** > + > **Camera** > Follow the prompts to pair the camera.
- Step 3** Drive the pan head screw 3/4 of the way into the surface. Slide the magnetic base onto the pan head screw and pull down to secure the base (see **Figure 2**).
- Step 4** (Optional) Use the two mounting screws. Remove the weatherproof plugs to insert screws into the mounting points. Do not over tighten. Replace weatherproof plugs. (see **Figure 3**).
- Step 5** Place the camera on the magnetic base and point in the desired direction.

Option 2: Adhesive mount for smooth surfaces

- Step 1** Follow steps 1 and 2 in **Option 1**.
- Step 2** Clean the surface and let it dry to ensure the strongest bond.
- Step 3** Peel off one side of the adhesive pad's backing. Press to the backside of the magnetic base (see **Figure 2**).
- Step 4** Remove the second side of the backing. Press firmly to secure it to the surface. Apply pressure to the sticker to ensure secure contact with the base.

For maximum bond, wait 24-48 hours before attaching the camera.
- Step 5** Place the camera on the magnetic base and point in the desired direction.

Optional camera stand for indoor usage

Stand sold separately.

Figure 4: Parts of the camera stand




Figure 5: Camera attached to stand.



Figure 6: Metal plate for mounting the camera stand





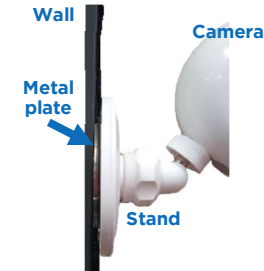 









Figure 7: Camera stand on angled surface.



Option 3: Mount with camera stand (sold separately)

- Step 1** Follow steps 1 and 2 in **Option 1**.
- Step 2** **Using on flat surfaces:**
- Screw the camera to the stand and tighten till snug (see **Figure 5**).
- Using on angled or hanging surfaces:** The stand's underside is magnetic and attaches to the metal plate.
- Attach the metal plate (see **Figure 6**) to the desired location with the mounting screws. Use wall anchors as needed.
 - Screw the camera to the stand and tighten till snug (see **Figure 5**).
 - Attach the stand to the metal plate using the stand's magnet (see **Figure 7**).
- Step 3** Point camera in the desired direction.

LED Lights

LED color	Pattern	Description
	Cyan Flashing	Camera charging
	Blue Pulsing	System booting
	White Pulsing	Ready for pairing
	White Flashing	Pairing
	White Solid	Ready mode
	Green Solid	In-call mode
	Blue Solid	Firmware upgrading
	Red Flashing	Alarm triggered
	Yellow Solid	Camera pairing failed: Check Wi-Fi credentials
	White Rapid Flashing	Wi-Fi reset: Hold Set button for 20 seconds
	Yellow Flashing	Power cycle: Hold Set button for 40 seconds
	Blue Rapid Flashing	Factory reset: Hold Set button for 60 seconds

Questions?

Contact us at 1-800-574-7798 or CST@shieldpro.com