

Flood & Temperature Sensor

Set Up Your Flood & Temperature Sensor

1 Choose a Location

Common areas include under the sink, behind a toilet, or near the water heater.

2 Pair the Sensor

From the Panel home screen, select Settings (☰) → Devices → Add Device (+) → Water.

Press the button on the bottom of the Sensor to trigger the device.

3 Name the Sensor

Name your Sensor and place it in your decided location with the underside facing the floor.

4 Complete Setup

Go back to the panel and press, "Done" on the bottom right screen.

Your Flood & Temperature is now active.



Flood & Temp.
Video Guide

800-574-7798

www.shieldpro.com/setup



Flood & Temperature Sensor
Setup Guide

 www.shieldpro.com/setup

 800-574-7798