



Placement tips

Place on a flat surface with the underside facing the floor. No mounting brackets or screws required.

Water detection: Place in areas prone to leakage and where water is most likely to pool.

Extreme temperature detection: Place in areas where temperatures may reach below 41°F or above 95°F. You can enable or disable any of the sensor's modes from the panel.

Flood / Temperature Sensor

The ShieldPro Flood / Temperature sensor installs easily in areas where water damage is a risk-like under sinks or in basements.

The sensor notifies you when it detects water or extreme temperatures. The sensor can be used in crawl spaces or places with exposed pipes.

Install your Flood / Temperature Sensor

STEP 1

Pair sensor with the panel.

Settings (☰) > Devices > + > Select Water > Follow the panel's instructions to pair your sensor.

STEP 2

Follow the panel's setup prompts to name and assign your sensor to a location.

STEP 3

Place your paired sensor as desired.

FIGURE 1

Flood / Temperature sensor underside

A. Pairing button

B. Contact points

