

What is Included:

Motion sensor
Wall screws (3)
Wall anchors (3)
3V Lithium battery



Placement tips

Indoor use only. Pair with the panel and reference the [Pin Key](#) before mounting. Place 6-7 feet above the ground. To prevent false alarms, do not install near any heat sources.

FIGURE 1

Sensor Exterior

- A. Pairing button
- B. Back casing
- C. Security Screw


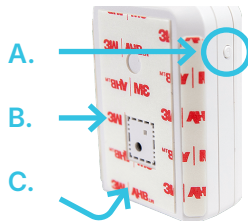


FIGURE 2

Sensor Interior

- D. Pet pins
- E. Sensitivity pins
- F. Battery

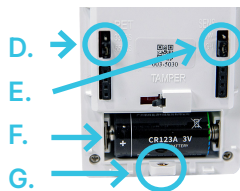

Motion Sensor

Mount your Motion Sensor

STEP 1

Clean and dry the location for the sensor.

STEP 2

Remove all battery tabs.

STEP 3

Pair with the panel.

Settings (☰) > Devices > + > Motion > Follow the prompts to pair the sensor.

STEP 4

Peel the backing off the sticker and press the sensor on to the wall. Only press on the hard plastic sensor casing.

How to Adjust the Configuration Pins

STEP 1

If the motion sensor is active, bypass it in your security panel.

STEP 2

Remove the security screw and back casing.

STEP 3

Pull the black plastic jumper straight up to remove it from the pins. You will see 3 pins (see [Pin Key](#)).

STEP 4

Replace the jumper by pushing straight down, covering the desired pins.

PIN KEY


Your motion sensor has two separate configuration options.

Pet Pins

This can help reduce false alarms caused by pets.

Pets up to 33lbs*

Cover: Top + Middle
Expose: Bottom

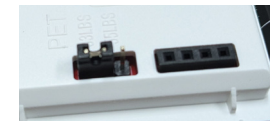

Pets up to 55lbs*

Cover: Bottom + Middle
Expose: Top



*Note: These are NOT exact weights. The closer a pet gets to the motion detector, the more likely they will trigger an event despite its size and the pin configuration.

Sensitivity Pins

Adjust the coverage distance of the motion sensor.

Low Coverage (13')

Cover: Top + Middle
Expose: Bottom



High Coverage (26')

Cover: Bottom + Middle
Expose: Top



STEP 5

Return sensor to back casing. Press on the hard plastic until it clicks in place. Secure with the security screw.

STEP 6

If bypassed, reactivate the sensor in the panel.