

#### What is Included:

|  |                      |
|--|----------------------|
| Adhesive sticker                       | Magnetic base        |
| Battery camera                         | Pan head screw       |
| Camera stand with mounting accessories | USB-C charging cable |
| Indoor / Outdoor Camera                | Wall anchors (3)     |
|  | Wall screws (2)      |


#### Placement Tips

**Suitable for indoor or outdoor use.** To prevent false alarms, do not install near any heat sources. Make sure all gray weatherproofing seals are secure when using the camera outside.

**FIGURE 1**

Backside of the magnetic base and pan head screw

- G. Pan head screw
- H. Pan head screw hole

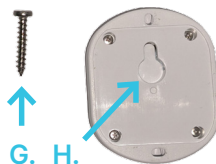

## Indoor / Outdoor Camera

ShieldPro's wireless Indoor / Outdoor camera lets you see what's happening at your home through the mobile app or panel.

The camera occasionally requires charging.

### Option 1: Mount with Magnetic Base

#### STEP 1

Charge your camera completely prior to install (see [LED Lights Key](#), page 7).

#### STEP 2

Pair your camera to the panel and use the app to check that the live stream works prior to installation.

**Settings (☰) > Devices > + > Camera >**  
Follow the prompts to pair the camera.

#### STEP 3

Drive the pan head screw 3/4 of the way into the surface. For extra stability, place double-sided tape on the magnetic base prior to mounting. Slide the magnetic base onto the pan head screw and pull down to secure the base (see [Figure 1](#)).

#### STEP 4

(Optional) Use the two mounting screws. Remove the weather-proof plugs to insert screws into the mounting points. Do not overtighten. Replace weather-proof plugs ([Fig. 2](#), page 7).

#### STEP 5

Place the camera on the magnetic base and point in the desired direction.

### Option 2: Adhesive Mount for Smooth Surfaces

#### STEP 1

Follow steps 1 and 2 in Option 1.

#### STEP 2

Clean the surface and let it dry to ensure the strongest bond.

#### STEP 3

Peel off one side of the adhesive pad's backing. Press to the backside of the magnetic base (see [Fig. 1](#)).

#### STEP 4


Remove the second side of the backing. Press firmly to secure it to the surface. Apply pressure to the sticker to ensure secure contact with the base. For maximum bond, wait 24-48 hours before attaching the camera.

#### STEP 5

Place the camera on the magnetic base and point in the desired direction.

**FIGURE 2**

Mounting screw points and weatherproofing plugs

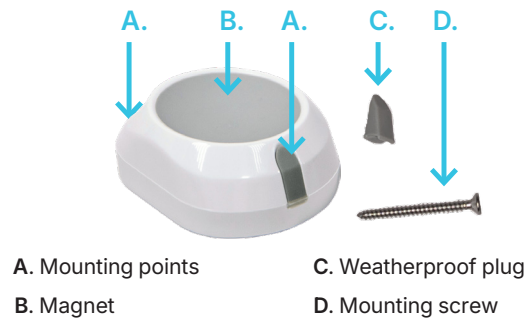
**FIGURE 3**


**FIGURE 4**

**FIGURE 5**

Metal plate for mounting the camera stand


**FIGURE 6**

 Camera stand on angled surface

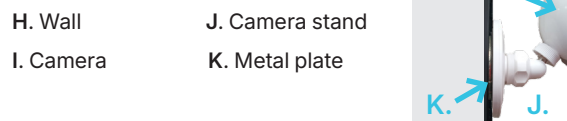

## Option 3: Mount with Camera Stand (sold separately)

### STEP 1

Follow steps 1 and 2 in Option 1.

### STEP 2

Using on flat surfaces:

- Screw the camera to the stand and tighten till snug (see [Fig.4](#)).







Using on angled or hanging surfaces: The stand's underside is magnetic and attaches to the metal plate.

- Attach the metal plate (see [Fig. 5](#)) to the desired location with the mounting screws. Use wall anchors as needed.
- Screw the camera to the stand and tighten till snug (see [Fig. 4](#)).
- Attach the stand to the metal plate using the stand's magnet (see [Fig. 6](#)).

### STEP 3

Point camera in the desired direction.

## LED LIGHTS KEY

| Color  | Pattern        | Description   |
|--|----------------|---|
|  Cyan     | Flashing       | Battery charging                                    |
|  Blue     | Solid          | Firmware upgrading                                  |
| Blue   | Pulsing        | System booting                                      |
| Blue   | Rapid Flashing | Factory reset:<br><i>Hold button for 60 seconds</i> |
|  White    | Solid          | Ready mode  |
| White  | Pulsing        | Ready for pairing                                   |
| White  | Flashing       | Pairing   |
| White  | Rapid Flashing | Wi-Fi reset:<br><i>Hold button for 20 seconds</i>   |
|  Green  | Solid          | In-call mode  |
|  Red    | Flashing       | Alarm triggered                                     |
|  Yellow | Solid          | Pairing failed:<br><i>Check Wi-Fi credentials</i>   |
| Yellow   | Flashing       | Power cycle:<br><i>Hold button for 40 seconds</i>   |